


Remote Station Operation Set Up Notes

KIOKK

Greg Wolfe

Remote Station Configuration

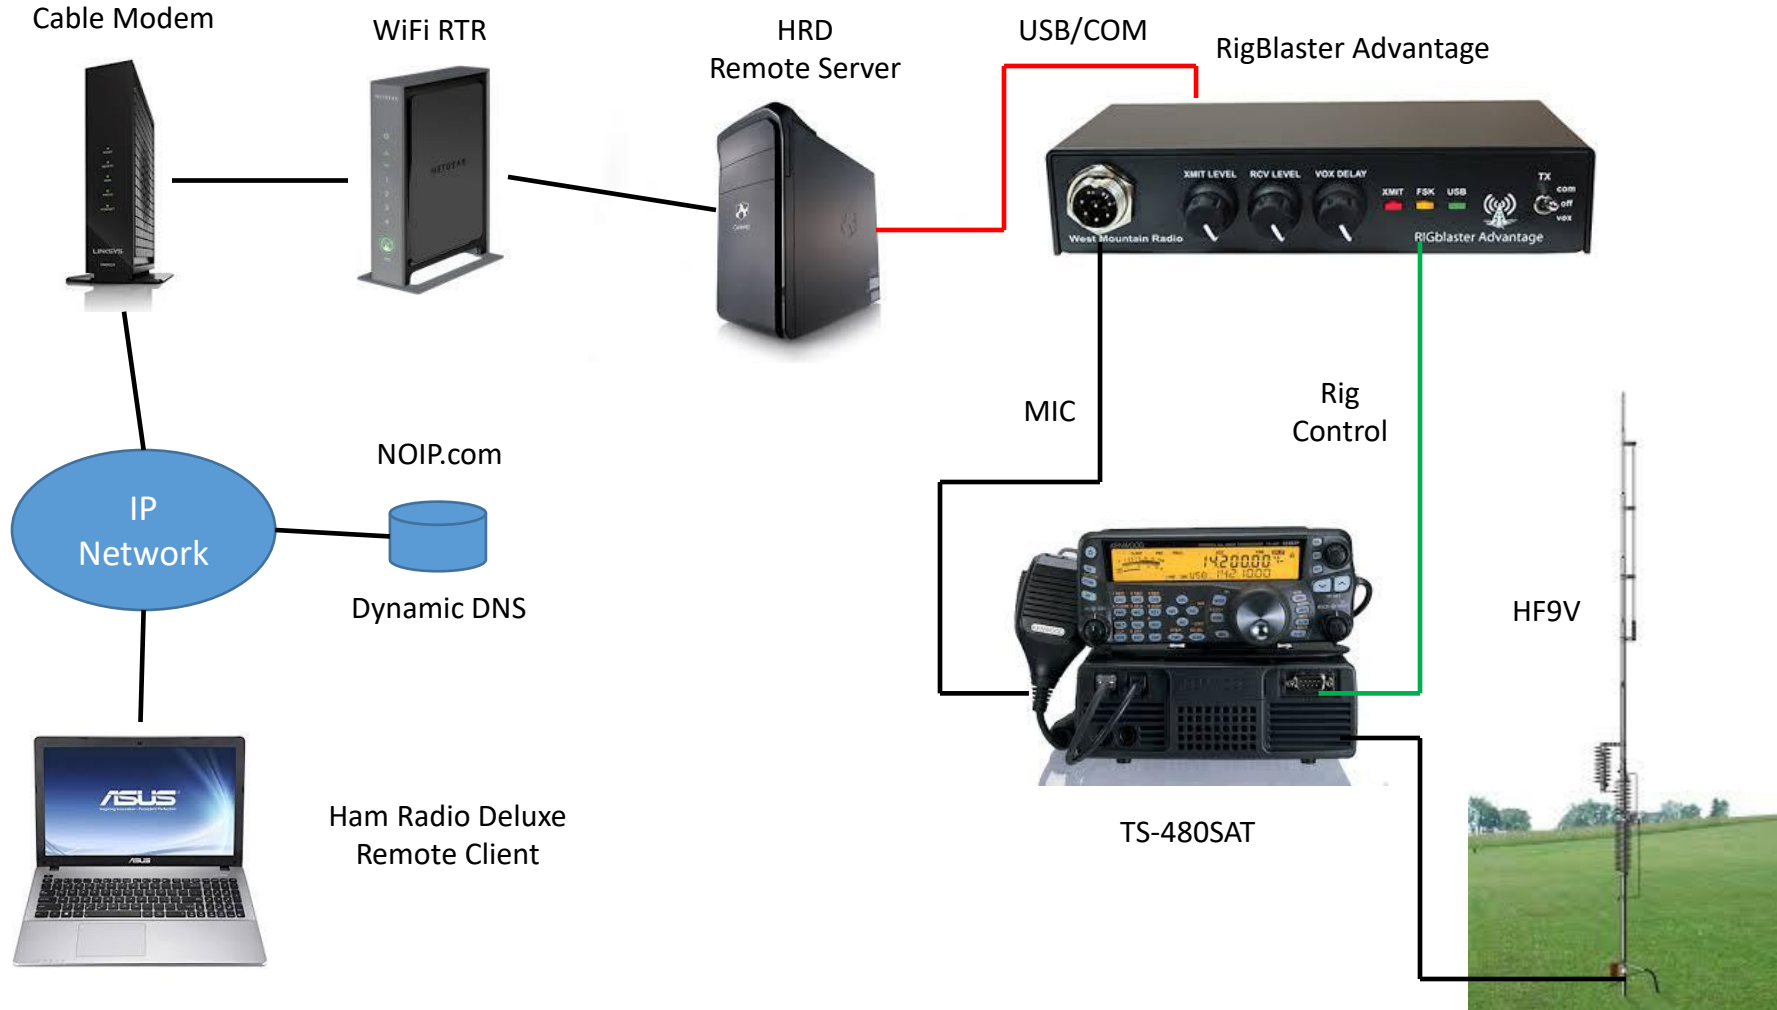

Basic Set Up

Remote Server

- Install HRD software
- Configure Radio to Sound Card Interface; COM port speed etc.
- Start HRD remote server
- Network Setup
 - Assign fixed IP to remote computer in WiFi RTR DNS server
 - Map IP Port 7805 to remote PC IP in WiFi RTR
 - In Cable Modem Map port 7805 through to WiFi RTR IP
 - Obtain DYN DNS domain name or determine Ca Modem Public IP
 - Verify port 7805 is open; canyouseeme.com

Remote Client

- Install HRD software
- Configure remote connection
- Remote Rig must be powered on